


## Wiring For MAF Conversion on E28 M5 BMW using ARC2-A

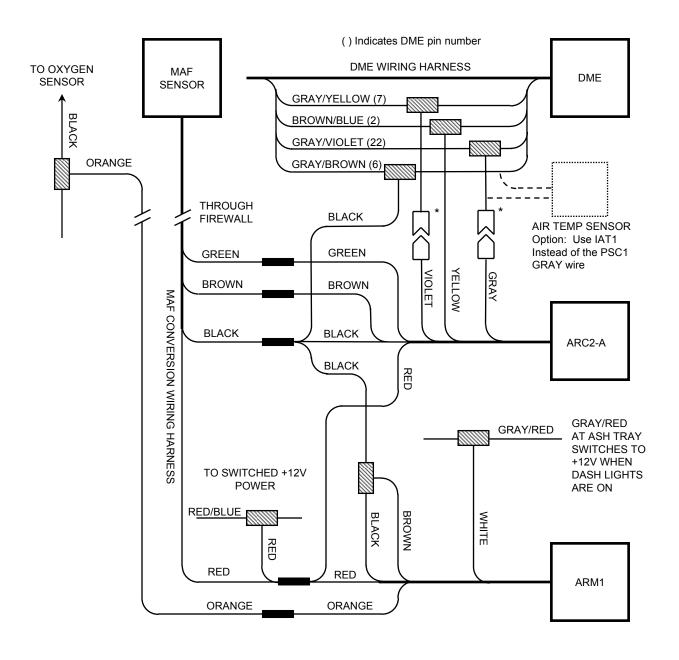

BUTT SPLICE CONNECTOR

RING CRIMP CONNECTOR

INSTANT SPLICE CONNECTOR

IN-LINE CONNECTOR

NOTE: IN-LINE CONNECTORS
MUST BE DISCONNECTED IF THE
STOCK AIR FLOW METER IS
RECONNECTED